

# Spencer Walcott Vinyl Replacement Window Measuring Instructions

These instructions are intended as a basic guide for replacement window measuring.

- A. Begin with measuring the width of the window to be replaced.

**WIDTH:** Measure between the window jambs at three points; top, middle, and bottom. Use the smallest measurement for sash opening.

- B. Next measure for height.


**HEIGHT:** Measure from head jamb to sill at the highest point of the sill. (The point closest to the interior stool cap.)

- C. Measure diagonals to check for squareness.

Spencer Walcott vinyl replacement units are manufactured to the nearest 1/4-inch in width and height for sash opening.

Do not remove the old window until the dimensions of the new window have been verified to fit the opening properly.

## A. Width

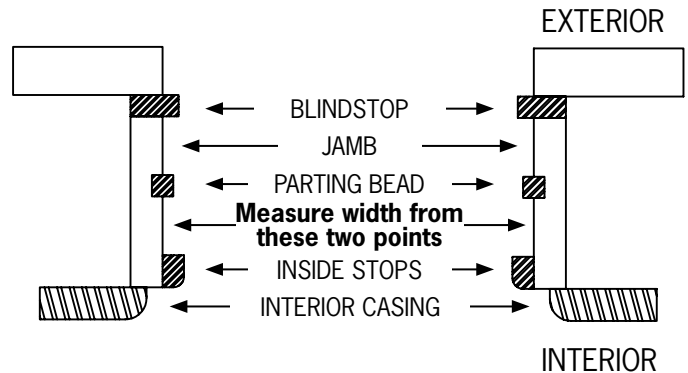

## B. Height

